

FIG. 1

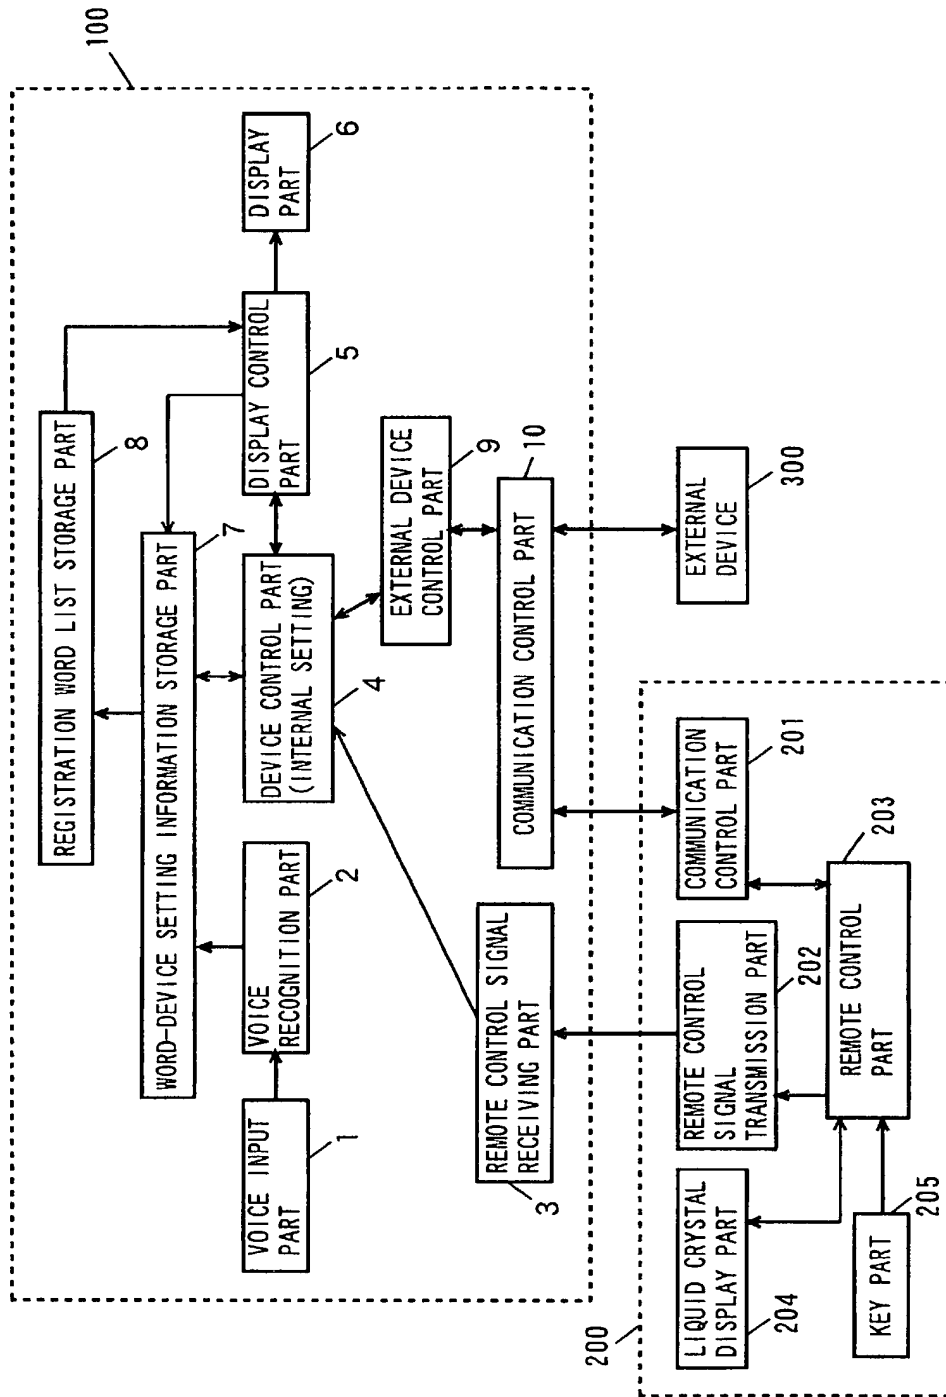


FIG. 2

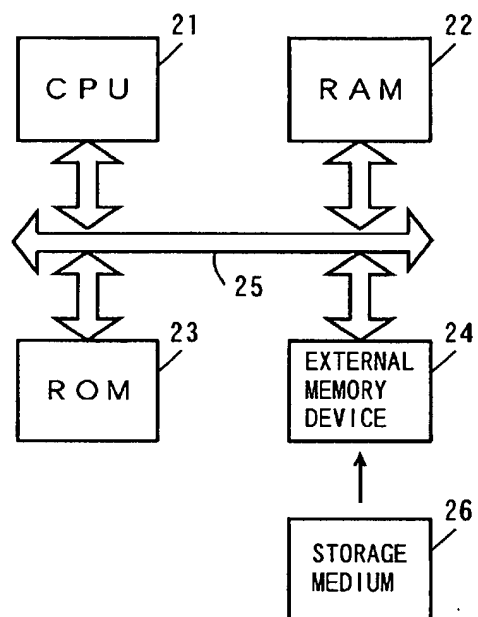


FIG. 3

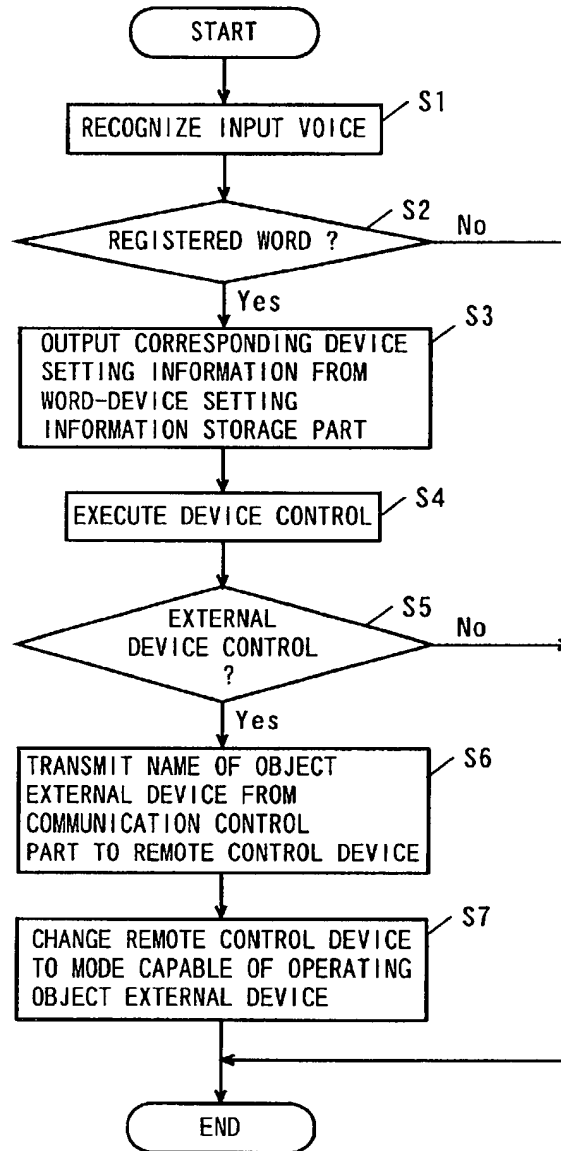


FIG. 4


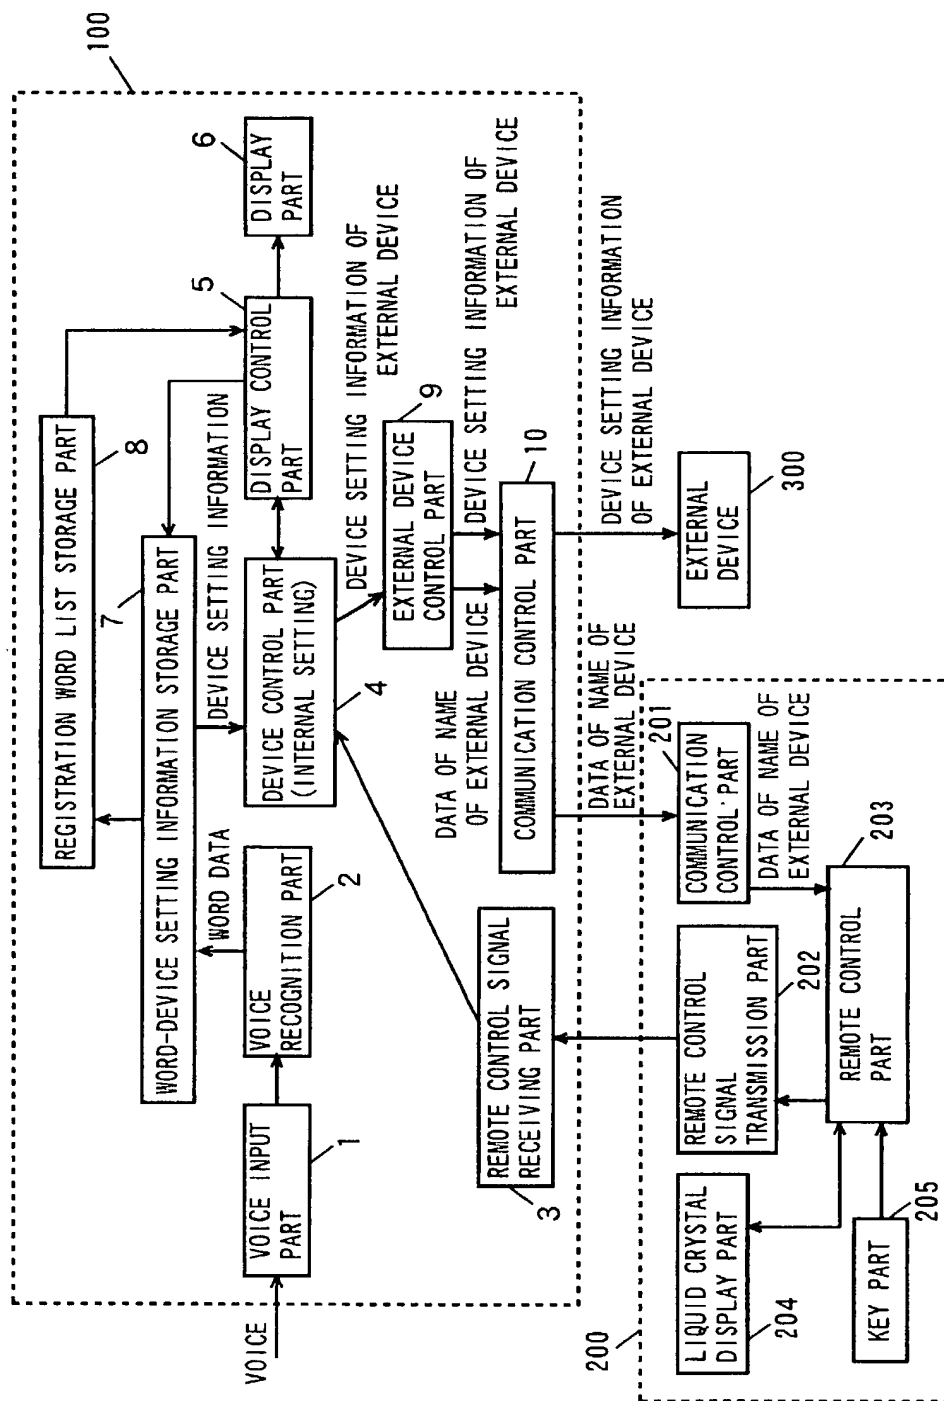


FIG. 5

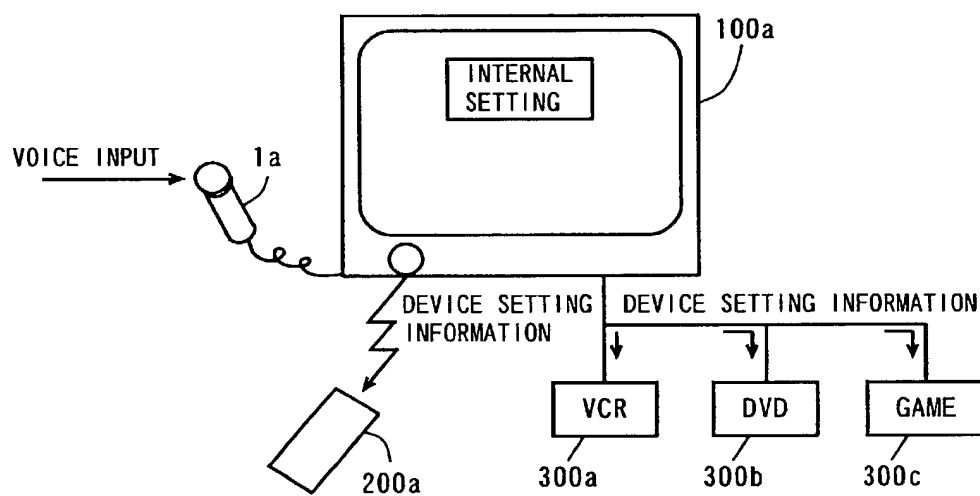

F01000"EF92000

F I G. 6

WORDS	DEVICE CONTROL 1 (DEVICE STATE 1)	DEVICE CONTROL 2 (DEVICE STATE 2)	DEVICE CONTROL 3 (DEVICE STATE 3)	DEVICE CONTROL 4 (DEVICE STATE 4)	DEVICE CONTROL 5 (DEVICE STATE 5)	...
びでおさいせい	INPUT SWITCHING (VIDEO 1)	GRAPHIC MENU (DYNAMIC)	VOICE MENU (DYNAMIC)	SCREEN MODE (NORMAL)	EXTERNAL DEVICE (VCR) (REPLAY)	
でいーぶいでいー さいせい	INPUT SWITCHING (VIDEO 2)	GRAPHIC MENU (CINEMA)	VOICE MENU (CINEMA)	SCREEN MODE (SELF-WIDE)	EXTERNAL DEVICE (DVD) (REPLAY)	
げーむ	INPUT SWITCHING (VIDEO 4)	VOICE MENU (GAME)	SCREEN MODE (FULL)	VOLUME (15)		
てれびおん	POWER SOURCE (POWER ON)	CHANNEL SWITCHING (8ch)	VOLUME (19)			
てれびおやすみ	VOLUME (10)	OFF-TIMER (30 MINUTES)				
...						

FIG. 7

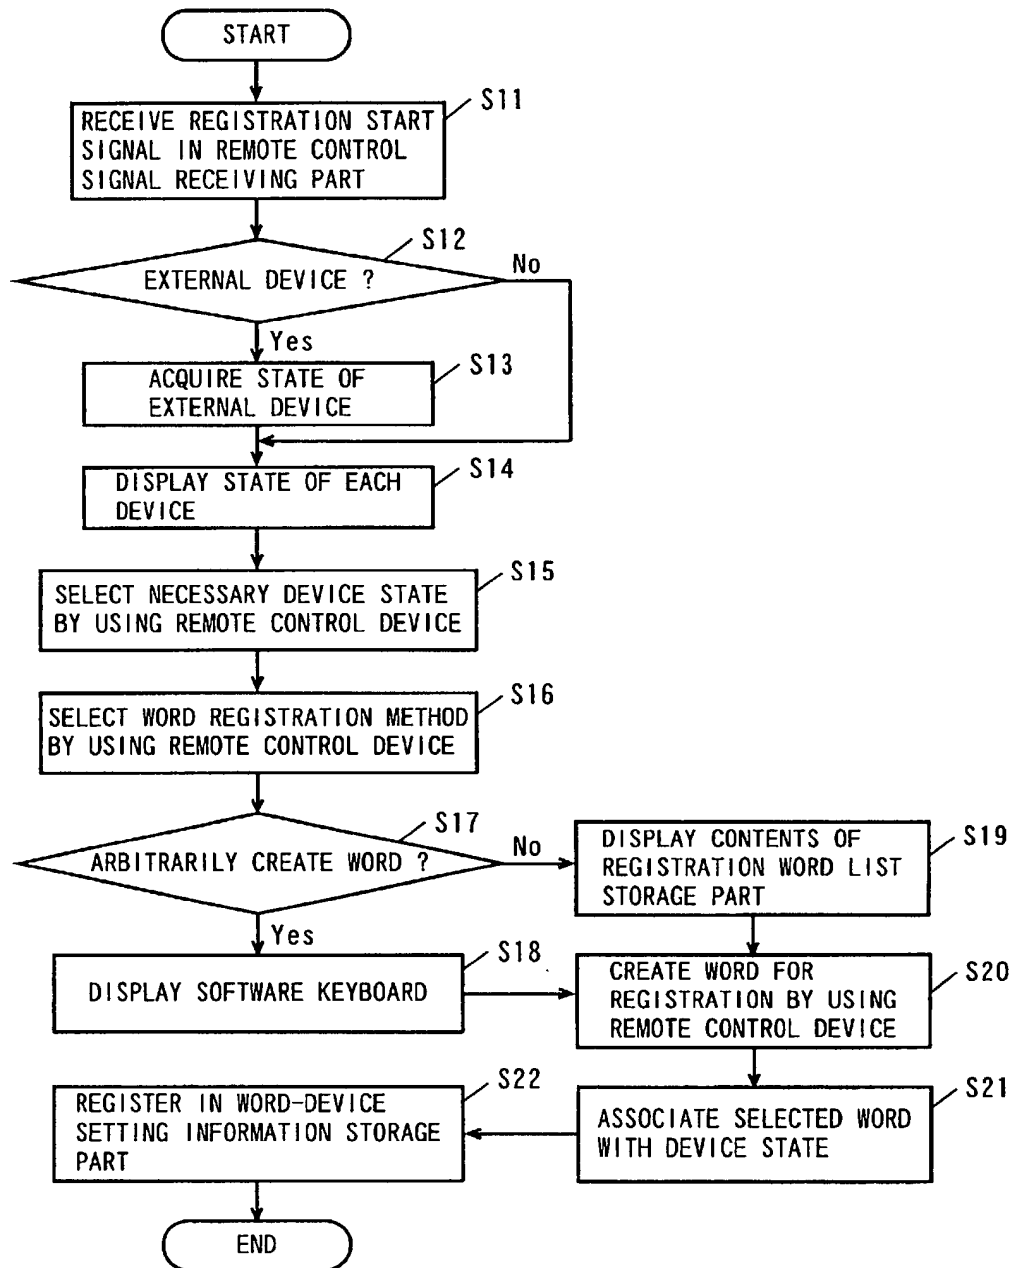


FIG. 8

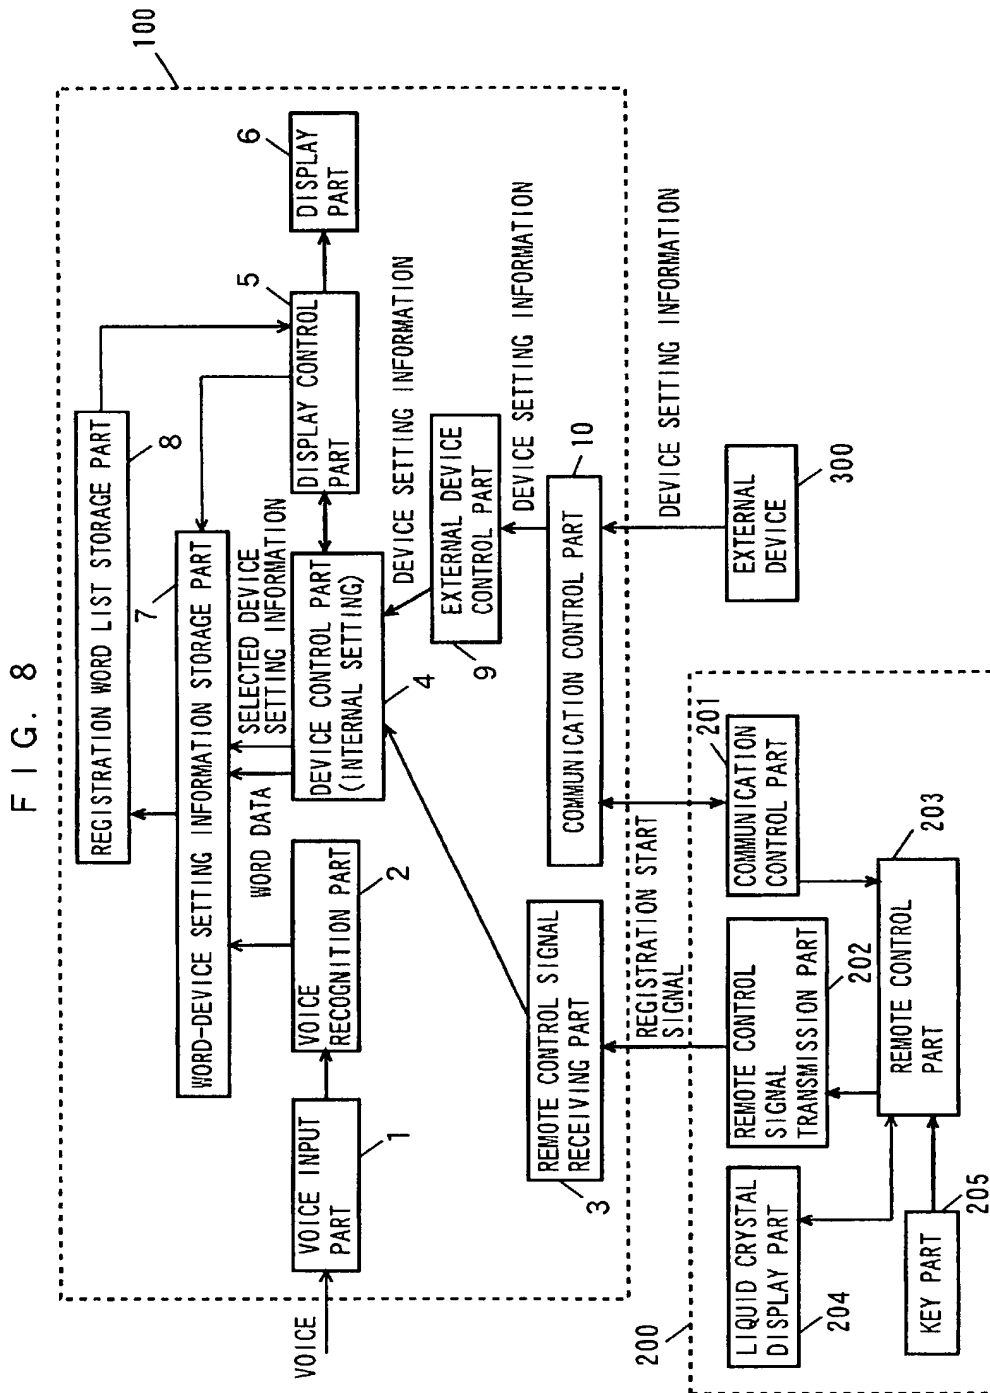




FIG. 9

あ	か	さ	た	な	は	ま	や	ら	わ	ん	が	ざ	だ	ば	ぱ
い	き	し	ち	に	ひ	み	や	り			ぎ	じ	ぢ	び	び
う	く	す	つ	ぬ	ふ	む	ゆ	る	よ		ぐ	ず	づ	ぶ	ぶ
え	け	せ	て	ね	へ	め	ゆ	れ			げ	ぜ	で	べ	べ
お	こ	そ	と	の	ほ	も	よ	ろ	を		こ	ぞ	ど	ほ	ほ

FIG. 10

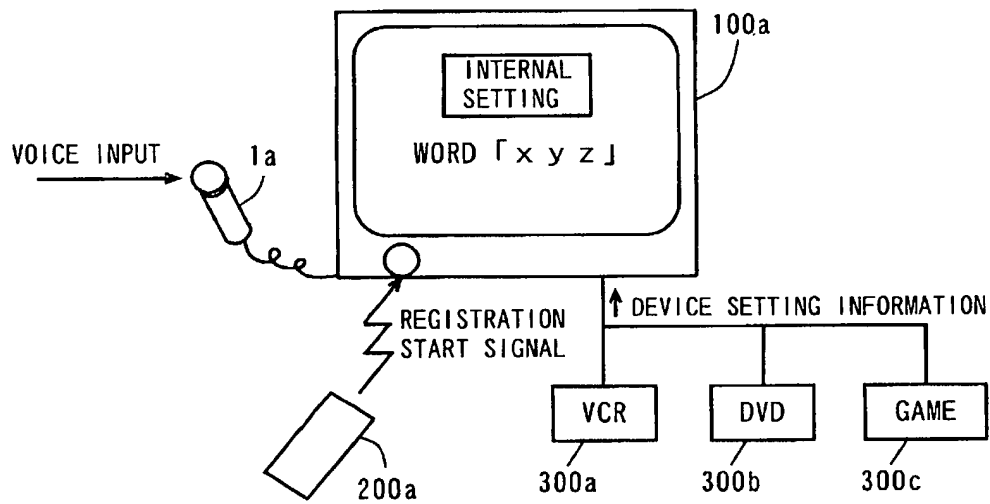


FIG. 11

CHECK ITEM TO BE ACTIVE	CONTROLLED ITEM	DEVICE STATE
	POWER SOURCE	ON
	VOLUME	13
✓	CHANNEL (INPUT)	VIDEO1
✓	GRAPHIC MENU	DYNAMIC
✓	VOICE MENU	DYNAMIC
✓	SCREEN MODE	NORMAL
	OFF-TIMER	OFF
	SURROUND	OFF
✓	EXTERNAL DEVICE (VCR)	REPLAY

FIG. 12

WORD (PRONUNCIATION)
テレビ (てれび)
ビデオ (びでお)
DVD (でいーぶいでいー)
ゲーム (げーむ)
デジタルCS (でじたるしーえす)
レーザーディスク (れーざーでいすく)
...
再生 (さいせい)
見る (みる)
プレイ (ぶれい)
...
オン (おん)
つけて (つけて)
つける (つける)
...
オフ (おふ)
消して (けして)
消す (けす)
...